

# Scout Camera Box Hood Installation


The hook and loop included with this kit is made with an industrial weatherproof adhesive. Carefully adjust the position prior to placing it on the camera box!



Target spot for hook and loop:



Remove the adhesive backer and install the hood top so the cut slots are around the ribs on the box. Press into place for at least 10 seconds.

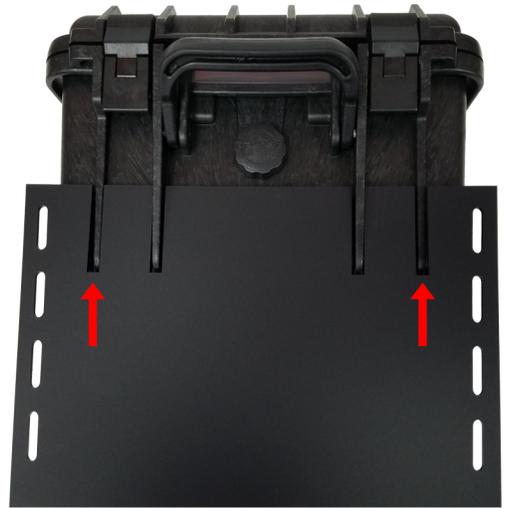

To install the sides slide it up into the slots in the top.



Then slide forward to lock into place.



Swing the side out and remove the adhesive backer. Adjust the level of the hood top to your liking and then swing down the side.

Press into place for 10 seconds.

Repeat for the other side.

